

DAILY CLEANING

Each cleaning cycle will take 15minutes. Cleaning must be carried out at least once at the end of everyday.

TOTAL CLEANING TIME:



YOU WILL NEED:

•Cimbali Ecocleaner Tablets
(Order code (#610-004-114))

IMPORTANT:

MILK IS A FOOD PRODUCT THAT REQUIRES MAXIMUM HYGIENE!

ALWAYS CLEAN YOUR STEAM ARM AFTER USE!


NOT PERFORMING REGULAR DAILY CLEANING CAN CAUSE BLOCKAGES THAT CAN DAMAGE THE MACHINE

Ensure a cleaning sign is displayed on coffee machine during the cleaning cycle

The machine should not be left unattended at any time during the cleaning process as this could cause a safety hazard.

Coffee cannot be served once the cleaning cycle has started .

It CANNOT be stopped, even if the machine is switched off.

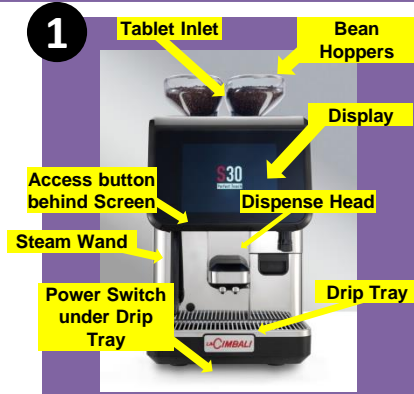

1

2




When the machine prompts, and at the end of everyday you should empty the drawer.

3



Pull the grounds drawer completely forward and out of the machine, empty all the used coffee from inside. At the end of the day wash and dry.

4

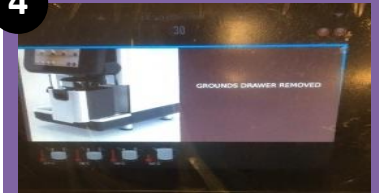


The screen will remind you that you have removed the tray, the image will stay on the screen if you have not fitted the drawer back correctly.

5



Once you have fitted the drawer back correctly press the green confirmation tick.

6

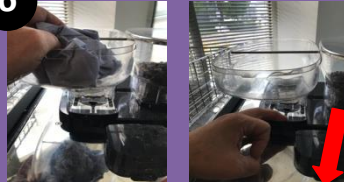

Wipe the inside of the hopper with a dry cloth to remove any coffee oils in the hopper. Wash weekly. To remove the hopper, pull the slide towards yourself and lift hopper up. Reverse to refit hopper.

7



Remove the drip tray daily, empty any coffee waste that has built up and wash in warm water and washing up liquid, then dry completely.

8



When replacing the drip tray ensure it is pushed fully in place, you should feel a slight click and fits firmly.

9



Keep the Steam Wand clean after every use with a sanitised cloth.

10



At the end of the day carefully unscrew the TurboSteam tip and soak in Hot Water for 10 minutes ensuring all holes are free of milk residue.

11



Wipe the exterior of the machine with a sanitised paper towel.
DO NOT Spray sanitiser onto the machine itself!


12



Lower the dispense head to its lowest point.


S30 S10 COFFEE MACHINE – CLEANING INSTRUCTIONS

13

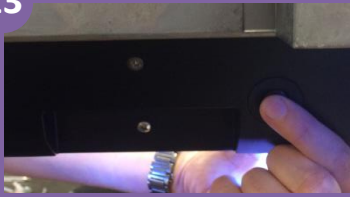

Find the soft touch button located behind the machine screen, in line with left hand hopper (see image 1) and press the button.

14

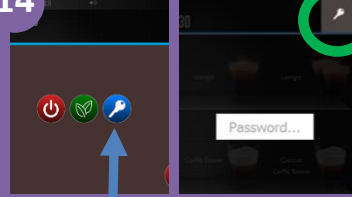


Select the Blue Key Button, then select key symbol in top right corner of next screen. You do not need to enter a code.

15



Select the water drop icon on the top left of the touch screen.

16

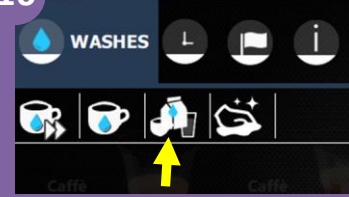

Press the 3rd Icon (3 symbols) from the left it will say complete wash once selected.

17




Press the green wash button to start the selected clean.

18



Lift the cleaning flap and place 1 Ecocleaner Tablet (remove the tablet from the wrapper) into the Tablet Inlet. Ensure the cleaning flap is fully closed.

19

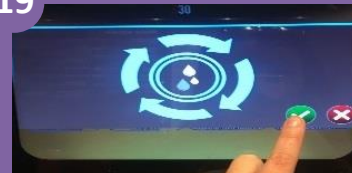

Warning: water will be very hot! ⚠️


Confirm the cleaning selection by pressing the green tick. Hot Water and chemical will dispense from dispense head

20



During the cleaning program you can tell the machine to power itself down by pressing the Red Power switch and making it green

21

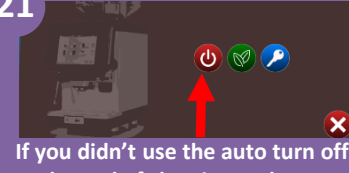

If you didn't use the auto turn off at the end of cleaning cycle press the soft touch button and select the red power button. **DO NOT USE POWER SWITCH BEHIND DRIP TRAY.** To turn on press Soft Button once



To report a machine fault please call: 0208 238 7100 opt 3
To order cleaning chemical call: 02476 854180